

Within these instructions you will find information on the correct use of ACRYFORM acrylic windows.

If you can't find the information you need, please contact us directly by email: info@acryform.com

 **WHILE DRIVING**

When the vehicle is in motion, all windows must be fully closed.

 **SUN BLINDS**


Never use the blind on direct sunlight. If you use the blind on direct sunlight, even for a short period, heat will accumulate between the window and the blind resulting in a damaged window (bending, ballooning...).



 **CLEANING**

Never use abrasive and corrosive substances or solvents on windows, such as turpentine, spirit, dishwasher detergents, as they will damage acrylic and/or print. We recommend cleaning with generous amounts of water or a mild cleaner intended for use on acrylic. Always use a moist sponge or a moist soft cloth as cleaning with a dry cloth can damage the acrylic and leave scratches. Never clean the windows with a high pressure washer. A carwash can also damage the windows and cause scratches or other damage.

Acrylic material scratches easily. Please follow the cleaning instructions above to prevent scratches or other damage from improper cleaning.

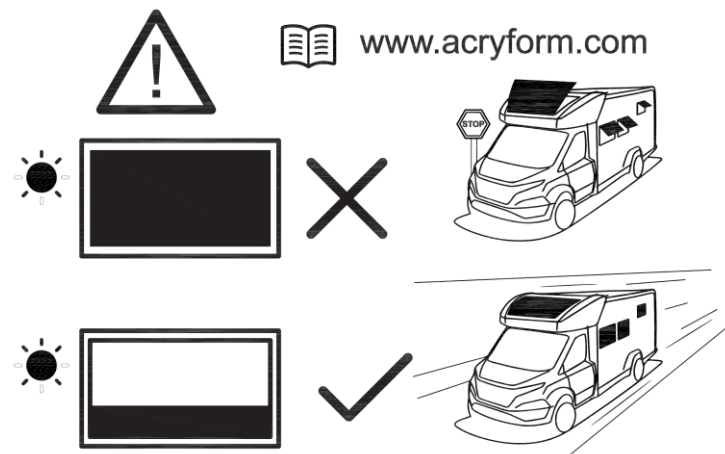

 www.acryform.com

i **CONDENSATION**

Condensation can appear on the window or between both panes. This doesn't mean there is something wrong with the window or that it is leaking. It is a natural occurrence caused by different temperatures inside and outside, air moisture and properties of acrylic itself. Condensation will disperse after some time. In most cases, condensation can be prevented by adequate ventilation of the vehicle.

i **OPENING AND CLOSING THE WINDOWS**

Your windows are equipped with either handles with buttons or handles without buttons and stays in step version or with a knob screw. Consider the following instructions to avoid the most common damage:

Handles with buttons:

Always push the button when opening/closing the handle.



Stays in step version:

You will hear clicks when opening the window. Every click represents a position in which a window can remain open. When closing the window, you must first open it fully to release the position lock and then close it. Do not try to simply close it as this will damage the stays.



Stays with knob screw:

Always loosen the knob before closing the window. When opening the window, firmly tighten the knob at the desired window position. Always tighten and loosen the knobs on both stays before moving the window.



The catcher and the handle are designed to allow different positions of the window.

Open position:

With the handle pointing towards the center of the window the window can be opened according to its stays.

Ventilating:

When the handle is in the groove of the catcher, the window is in the ventilating position.

**Closed position:**

A window is fully closed when the handle is closed on the inner part of the catcher.

When ventilating or closing the window, make sure all handles are in correct position. If all handles are not in the same position, deformation and bending of the window can occur.

ACRYFORM windows are top quality windows produced from acrylic material.

If you follow these instructions, your windows will remain in good condition for a long time.

Windows also require periodic maintenance and we recommend a check by your dealer at least once a year.

